

Table 2-1 Sample Display Configurations

Sample Display Configuration	mDP Connector	mDP Connector	mDP Connector	mDP Connector	mDP Connector	mDP Connector	Total Output
mDP-mDP- mDP-mDP- mDP-mDP	Native	Native	Native	Native	Native	Native	6
DP-DP-DP-DP- DP-DP	mDP to DP	mDP to DP	mDP to DP (A)	mDP to DP (A)	mDP to DP (A)	mDP to DP (A)	6
dDVI-dDVI- dDVI-dDVI- dDVI-dDVI	mDP to DVI (A)	mDP to DVI (A)	mDP to DVI (A)	mDP to DVI (A)	mDP to DVI (A)	mDP to DVI (A)	6
VGA-VGA- VGA-VGA- VGA-VGA	mDP to VGA (A)	mDP to VGA (A)	mDP to VGA (A)	mDP to VGA (A)	mDP to VGA (A)	mDP to VGA (A)	6
mDP-mDP-DP- DP-dDVI-VGA	Native	Native	mDP to DP (A)	mDP to DP (A)	mDP to DVI (A)	mDP to VGA (A)	6
DP-DP-DP-DP- HDMI	mDP to DP (A)	mDP to DP	mDP to DP (A)	mDP to DP (A)	mDP to HDMI (P)	No connection	5
dDVI-dDVI- dDVI-VGA- HDMI	mDP to DVI (A)	mDP to DVI (A)	mDP to DVI (A)	mDP to VGA (A)	mDP to HDMI (P)	No connection	5
mDP-mDP- mDP-dDVI- sDVI	Native	Native	Native	mDP to DVI (A)	mDP to DVI (P)	No connection	5
sDVI-sDVI	mDP to DVI (P)	mDP to DVI (P)	No connection	No connection	No connection	No connection	2
HDMI-HDMI	mDP to HDMI (P)	mDP to HDMI (P)	No connection	No connection	No connection	No connection	2

Note: HDMI audio is limited to a single display (the last HDMI device connected).

Adapters not included with your AMD FirePro W600 can be purchased directly from AMD's Web site (http://www.amd.com) or through your local AMD resellers.

Active displays will supersede passive displays. For example, if you connect a DisplayPort display to a system that already has two passive single-link DVI displays, one of the single-link DVI displays will deactivate.